



# Allguard and Lifeguard Conveyor Chain Disconnect Instructions


1. Locate chain disconnect hardware. Make sure the installed toothed guide plate fits the chain being disconnected.  
(see "RKO Tool Setup" sheet for details)

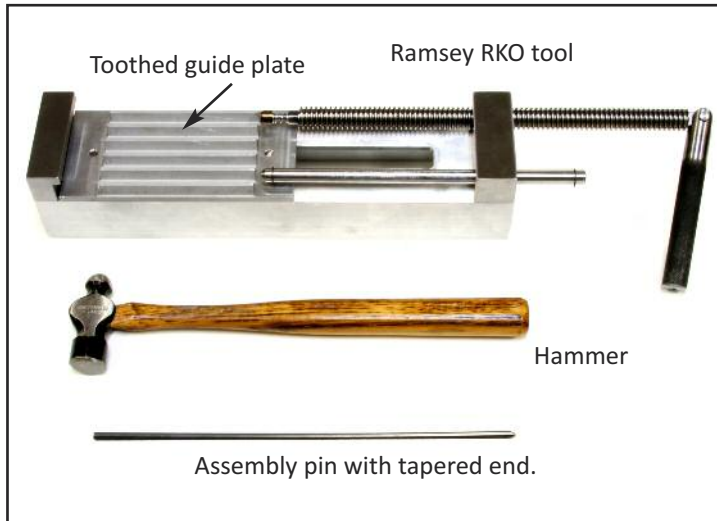

2. Mark the chain joint where you wish to disconnect the chain.

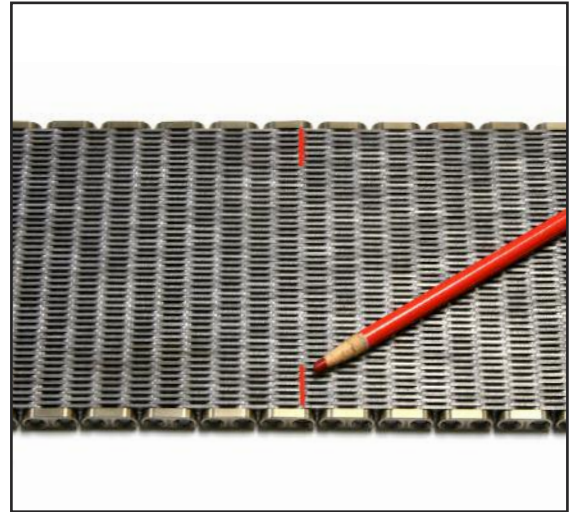

3. Position Ramsey RKO tool under the chain so the ram screw is aligned with the pin to be removed and the chain contacts the back block.

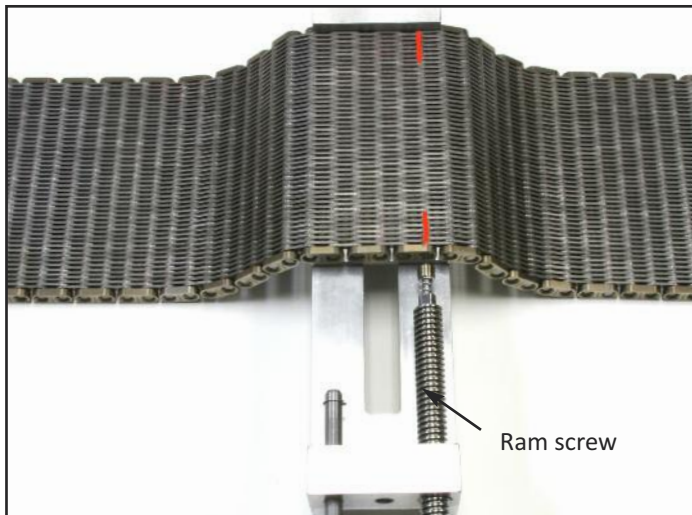


4. While holding down the chain, turn the ram screw until you hear a popping sound made by the pin head breaking off.




(continued on back)


5. Move the RKO tool so the pin being removed now lines up with the centrally located hole in the front of the tool.

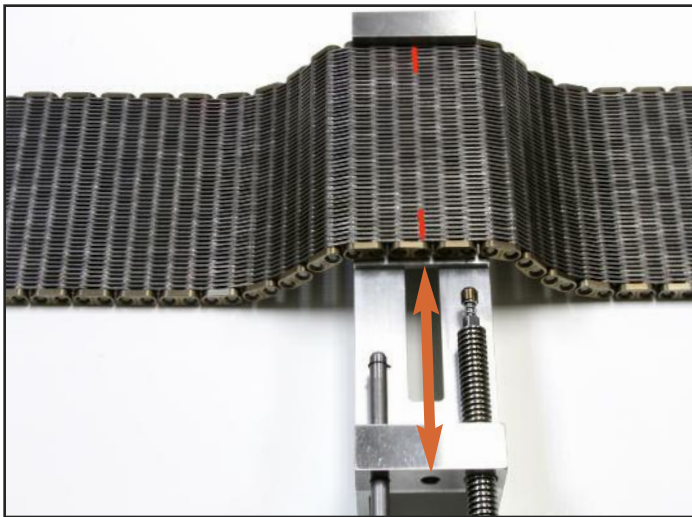

6. Insert the tapered assembly pin through the front block until it contacts the pin being removed.

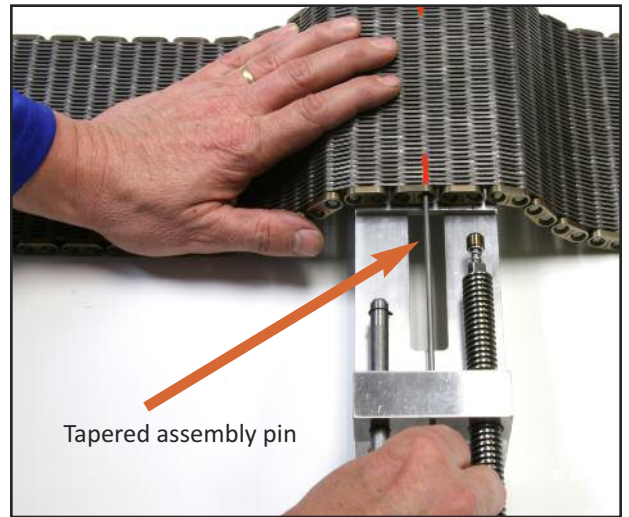

7. Using the hammer, drive the assembly pin into the chain so the chain pin is pushed out.

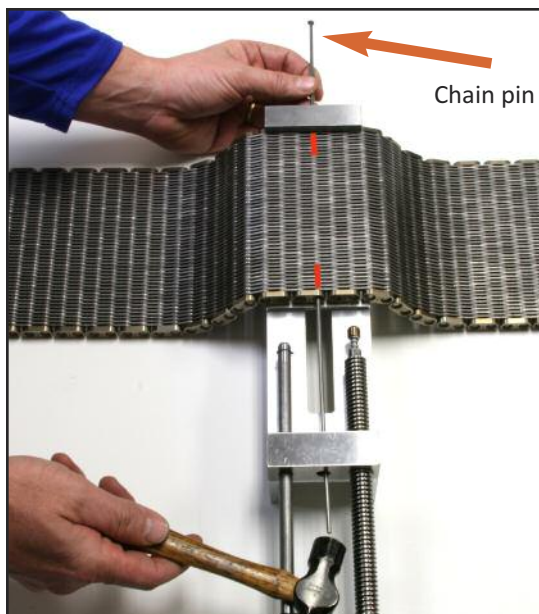

8. Remove assembly pin and chain pin, then disconnect the ends of the chain.

